



CLEANING

EXTERIOR CLEANING

To clean the classic stainless steel exterior of the Model 315W/S, use a soft, nonabrasive stainless steel cleaner like Signature Polish (see side note) and apply with a soft 100% lint-free cloth.

If anything spills onto the door gasket, wash with soap and warm water to remove. Rinse and dry thoroughly.

GLASS DOOR CLEANING

The glass door panel can be cleaned using any standard glass cleaner available on the market today.

INTERIOR CLEANING

To clean interior surfaces and removable parts, wash with a mild solution of soap and luke-warm water with a little baking soda. Do not use vinegar. Rinse and dry thoroughly. Avoid getting water on lights, control panel and the solid cherry wood facing on the shelves.

Do not use abrasive cleaners or cloths on any of the interior or exterior surfaces, including the glass door panel.

CLEANING THE CONDENSER

⚠ WARNING

Before cleaning the condenser and other routine maintenance, shut off power at the circuit breaker supplying power to the electrical outlet.

The air-cooled condenser should be vacuumed two to three times per year to remove any lint that may have been drawn into the condenser. To access the condenser, use a phillips head screw driver to remove the kickplate as shown in the illustration below. Then using a soft bristle brush, vacuum to remove dust and lint from the condenser. Refer to the illustration below.


IMPORTANT NOTE: To avoid bending the condenser fins, be sure to vacuum in the direction of the fins (up and down).

⚠ CAUTION


Failure to clean the condenser could result in temperature loss or mechanical failure or damage.

SIGNATURE
POLISH

Signature Polish
is available from
Signature Limited
Laboratory,
P. O. Box 13436,
Dayton, Ohio
45413-0436, or
call 877-376-5474
(toll free).

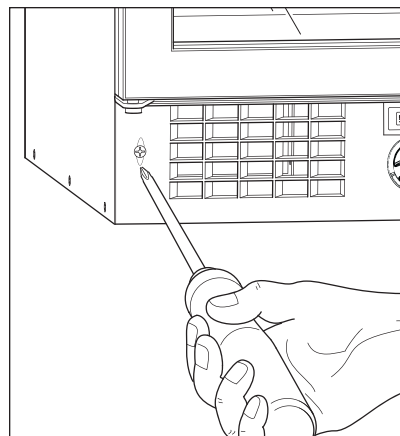

Kickplate removal

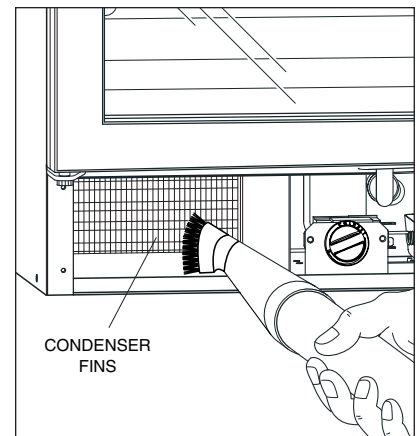

Cleaning the condenser