



INTERIOR CLEANING

To clean interior surfaces and removable parts, wash with a mild solution of soap and luke-warm water with a little baking soda. Do not use vinegar. Rinse and dry thoroughly. Avoid getting water on lights and control panel.

⚠ CAUTION

Do not submerge or pour hot water over cold glass shelves.

EXTERIOR CLEANING

To clean the exterior stainless steel surfaces of the PRO 48, use a soft, nonabrasive stainless steel cleaner like Signature Polish and apply with a soft, 100% lint-free cloth.

To bring out the natural luster of the stainless steel, lightly wipe the surface with a water-dampened microfiber cloth followed by a dry polishing chamois. All work should follow the grain direction of the finish. Better results are obtained by keeping the cloth in continuous contact with the stainless steel.

Signature Polish is available from Signature Limited Laboratory, P. O. Box 13436, Dayton, Ohio 45413-0436, or 877-376-5474 (toll free).

⚠ CAUTION

Under no circumstances should you use a metallic or highly abrasive cleaner or cloth, as this will scratch the classic stainless steel finish.

CONDENSER CLEANING

The condenser of the PRO 48 is located behind the grille at the top of the unit. The grille must be lifted to access the condenser area for cleaning. To lift the grille, pull out on the bottom edge of the grille and tilt the grille frame forward.

Use a soft bristle brush and vacuum to remove dust and lint from the condenser. Clean the condenser area every three to six months.

⚠ CAUTION

Failure to clean the condenser could result in temperature loss or mechanical failure or damage.

⚠ CAUTION

Before cleaning the unit, shut the electricity off at the control panel. When you clean the condenser, wear gloves to avoid injury from the sharp condenser fins.